



PLAN

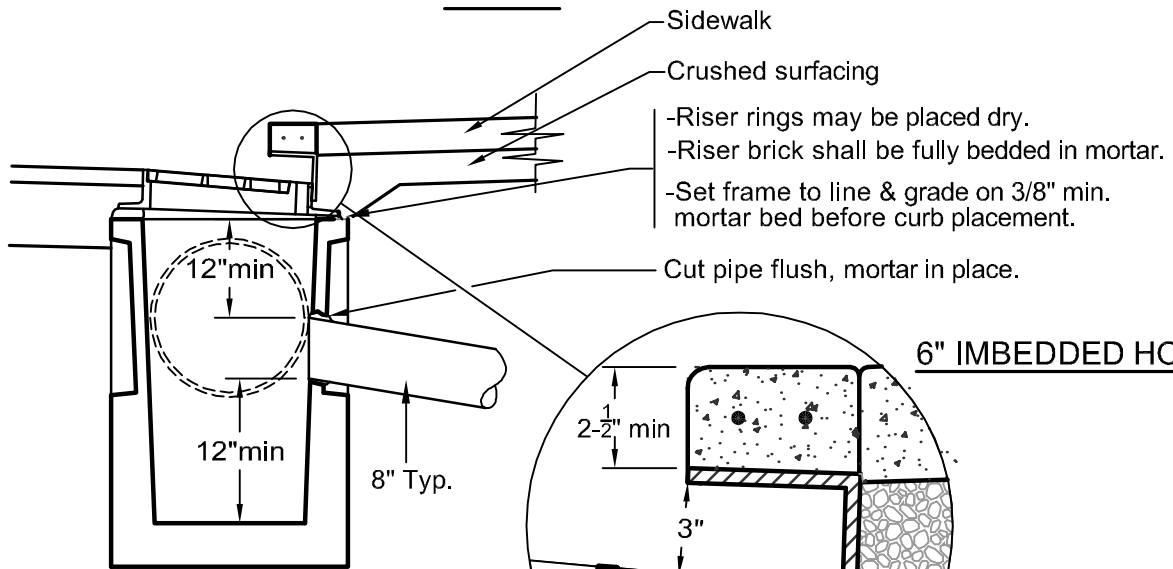

SECTION A-A


6" IMBEDDED HOOD

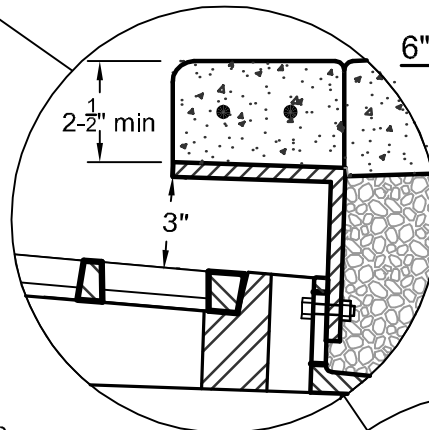

ALT. 9" HOOD

Install Hood Flush

Face of Curb

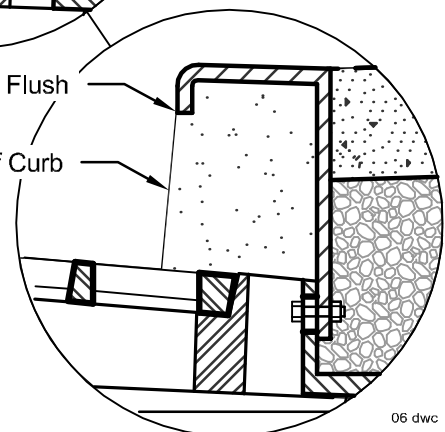

NOTES:

1. Frame and grate per Standard Drawing No. 13.
2. Depress back of lid 1 inch at flowline to provide a 2 - inch fall across the grate.
Gutter lip and top of curb are not depressed.
3. Use WSDOT Type 1 precast catch basin box.
4. Set the catch basin box on 2 inches (min) layer of crushed surfacing leveling course.
5. Set frame to provide 90% (min) clear drainage opening with reference to the box opening.
6. Storm drain catch basin leaders shall be installed with no less than 2 feet of cover as measured from finished grade at the catch basin.

AutoCAD: Catch Basin

06 dwc

DRR

CATCH BASIN

PAGE NO:

22